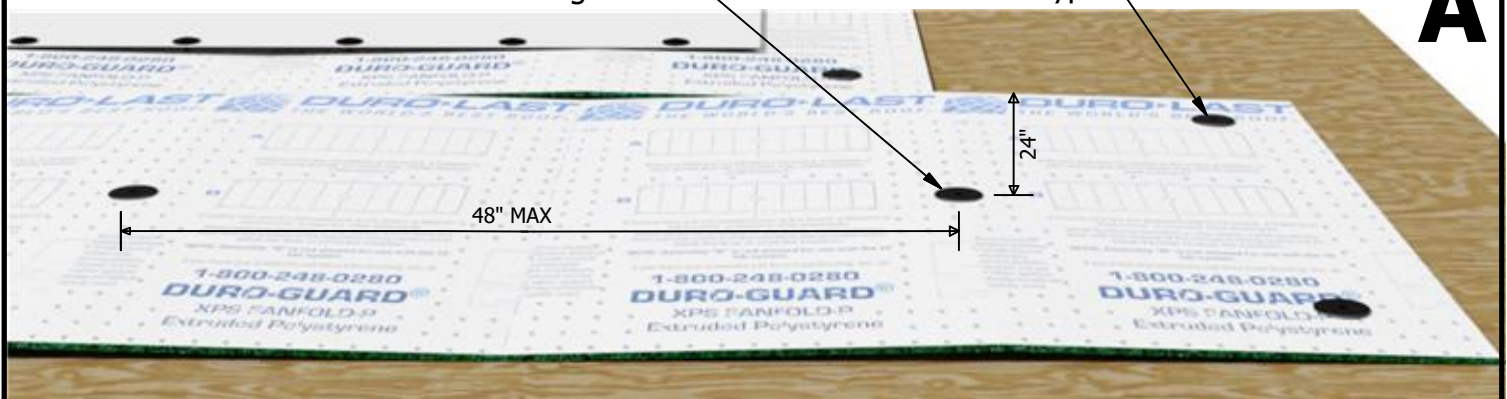


MEMBRANE FASTENER ROWS SPACED 60 INCHES OR LESS

Locate on high folds

6" from corners typ.

A


If membrane fastener rows run parallel to 50-ft board dimension, fasten according to drawing A.

6" from corners typ.


B


If membrane fastener row run perpendicular to 50-ft board dimension, fasten according to drawing B.

MEMBRANE FASTENER ROWS SPACED GREATER THAN 60 INCHES

Located on high folds

6" from corners typ.

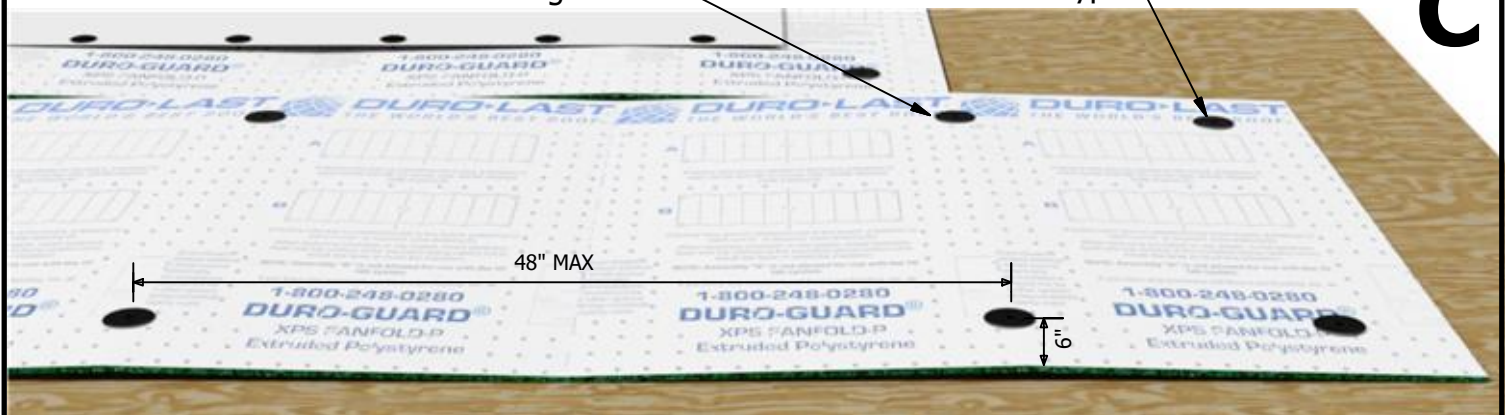C


Regardless of membrane fastener row direction, fasten according to drawing C.

Note: Do not overdrive the fasteners. overdriven fasteners might crush the fan fold board or tear the facer.

REVISED:	10/03/17	GENERAL DETAIL FOR MECHANICALLY FASTENED SYSTEMS
PREVIOUS:	10/14/16	DURO-GUARD® FAN FOLD FASTENING
SCALE:	NONE	NEW CONSTRUCTION OR RE-ROOF