

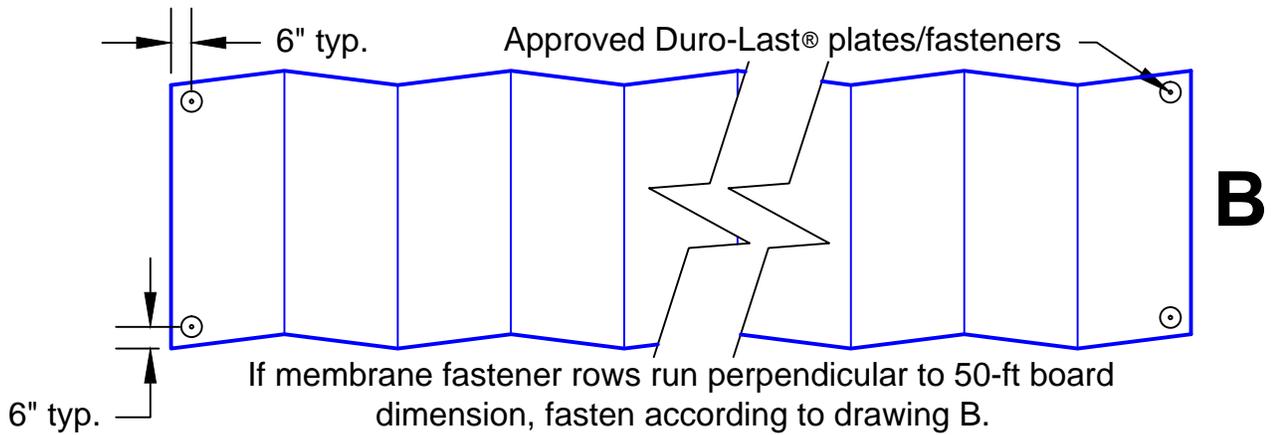


MEMBRANE FASTENER ROWS SPACED 60 INCHES OR LESS

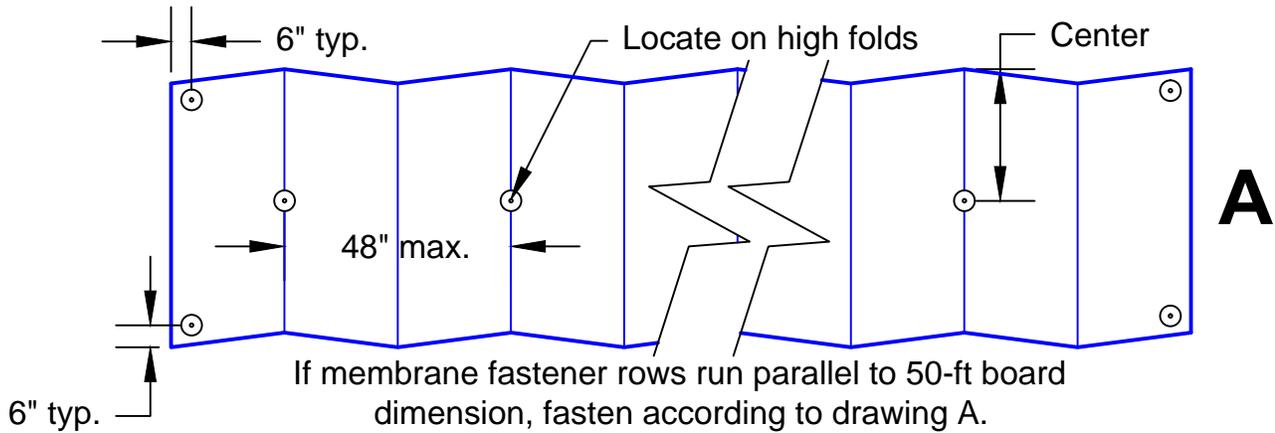

MEMBRANE FASTENER ROWS SPACED GREATER THAN 60 INCHES

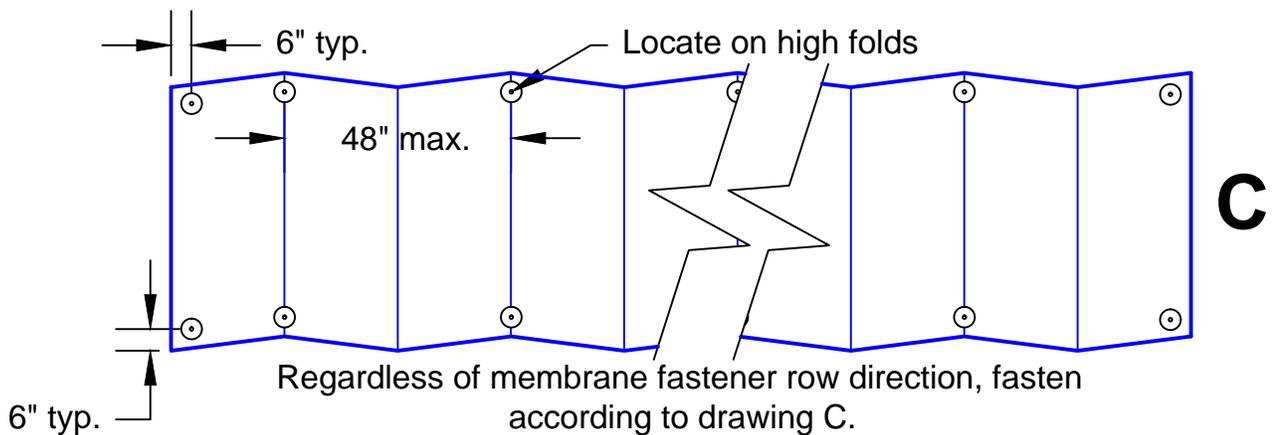

Note: Do not overdrive the fasteners. Overdriven fasteners might crush the fan fold board or tear the facer.

| | |
|----------------------|--|
| REVISED: 01/30/2017 | GENERAL DETAIL FOR MECHANICALLY FASTENED SYSTEMS |
| PREVIOUS: 01/01/2009 | DURO-GUARD® FAN FOLD FASTENING |
| SCALE: NONE | NEW CONSTRUCTION OR RE-ROOF |