




STEP #1: GRAVEL STOP AND DRIP EDGE CORNER FASTENING

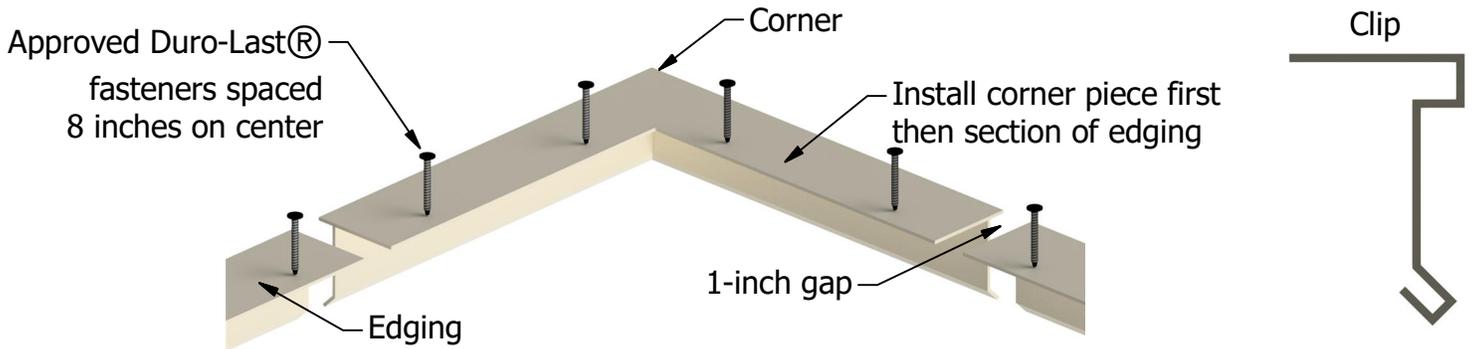

STEP #2: WELDING SKIRTS

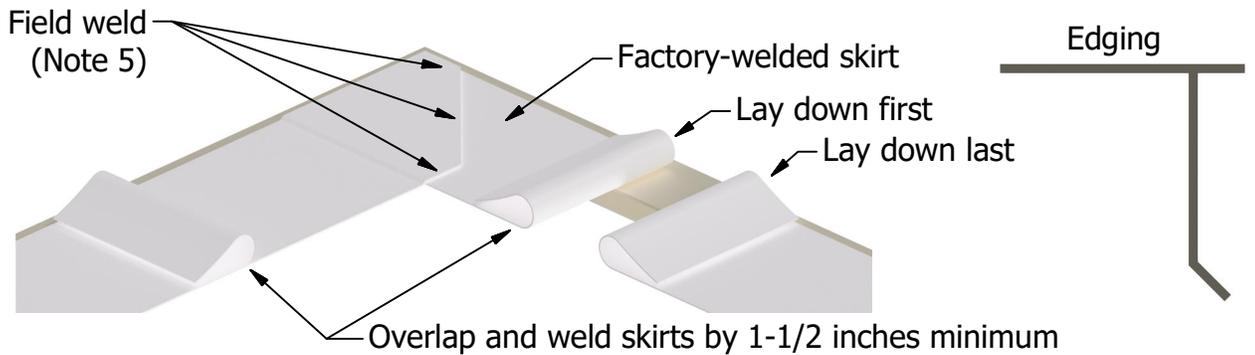

STEP #3: CLIP INSTALLATION

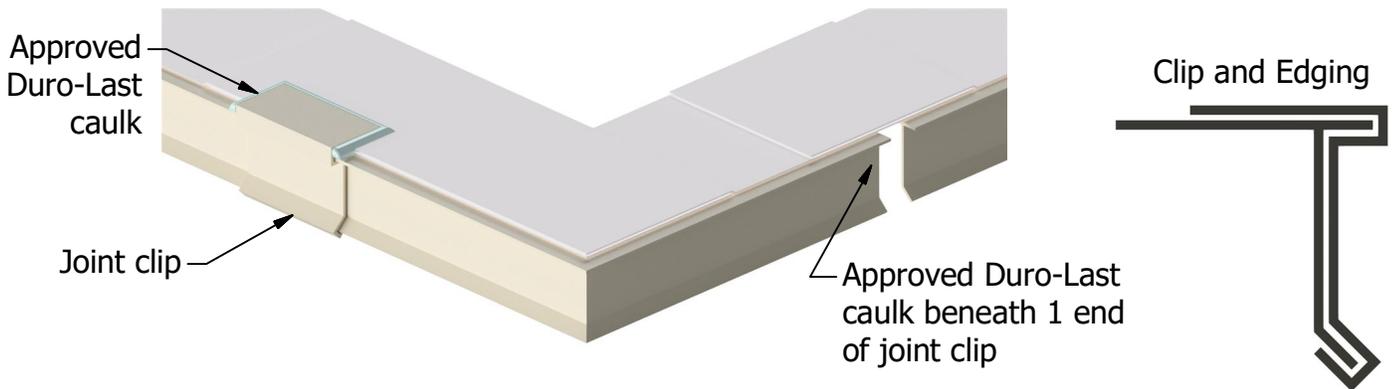

Note 1: The use of this detail is not allowed on adhered applications.

Note 2: Install in conjunction with appropriate Gravel Stop or Drip Edge detail drawings.

Note 2: Do not cut skirt from either edging or corner.

Note 3: If edging is cut, fasteners must be located a maximum of 1 inch from each end.

Note 4: This detail may also be used on parapet walls.

Note 5: All field welds shall be a minimum of 1-1/2 inches wide.

REVISED:	07/20/17	EDGE DETAIL FOR MECHANICALLY FASTENED SYSTEMS
PREVIOUS:	07/20/17	GRAVEL STOP / DRIP EDGE CORNERS
SCALE:	NONE	NEW CONSTRUCTION OR RE-ROOF