


STEP #1: GRAVEL STOP AND DRIP EDGE CORNER FASTENING

Approved Duro-Last® fasteners spaced 8 inches on center

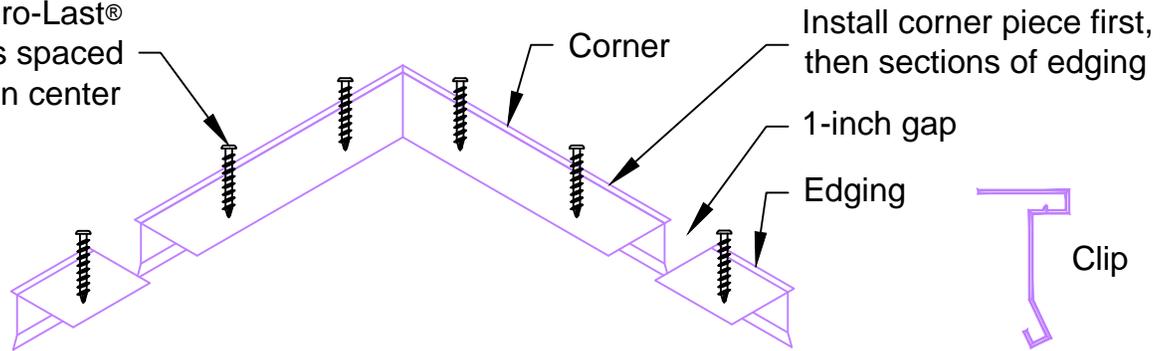


Install corner piece first, then sections of edging

1-inch gap

Edging

Clip

STEP #2: WELDING SKIRTS

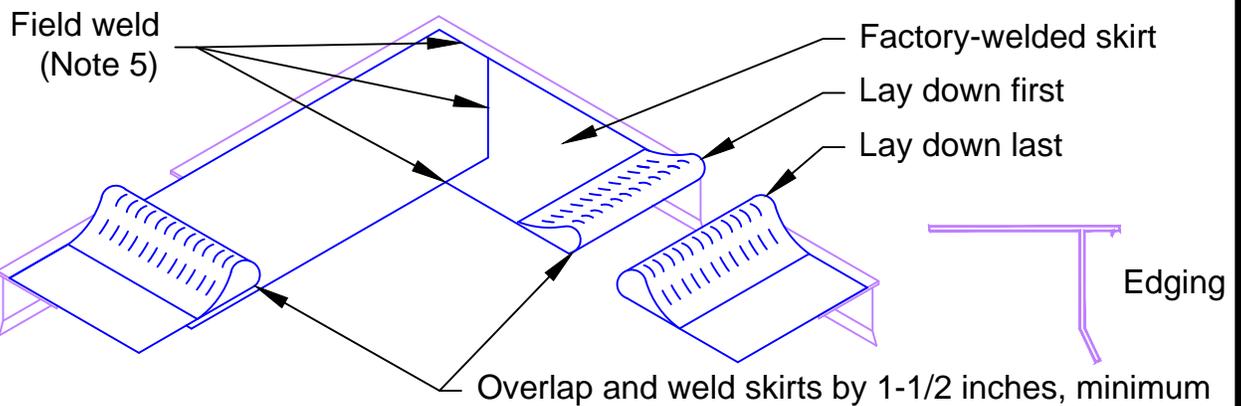

Factory-welded skirt


Lay down first

Lay down last

Edging

Overlap and weld skirts by 1-1/2 inches, minimum

STEP #3: CLIP INSTALLATION

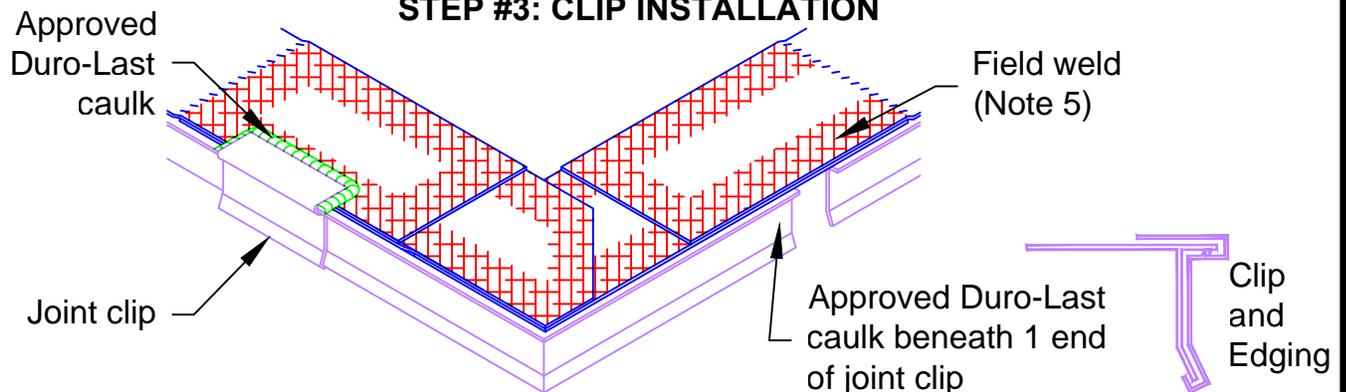

Approved Duro-Last caulk

Joint clip

Field weld (Note 5)

Approved Duro-Last caulk beneath 1 end of joint clip

Clip and Edging

Note 1: The use of this detail is not allowed on adhered applications.

Note 2: Install in conjunction with appropriate Gravel Stop or Drip Edge detail drawings.

Note 2: Do not cut skirt from either edging or corner.

Note 3: If edging is cut, fasteners must be located a maximum of 1 inch from each end.

Note 4: This detail may also be used on parapet walls.

Note 5: All field welds shall be a minimum of 1-1/2 inches wide.

REVISED: 03/23/2017

EDGE DETAIL FOR MECHANICALLY FASTENED SYSTEMS

PREVIOUS: 01/01/2009

GRAVEL STOP / DRIP EDGE CORNERS

SCALE: NONE

NEW CONSTRUCTION OR RE-ROOF