


Cut patch to allow for 2-inch overlap of vapor barrier on deck

Cut release film away from center hole approximately 1 inch. Leave enough film to hold patch while installing over penetration. Do not puncture vapor barrier.

Duro-Last custom-fabricated Stack Flashing

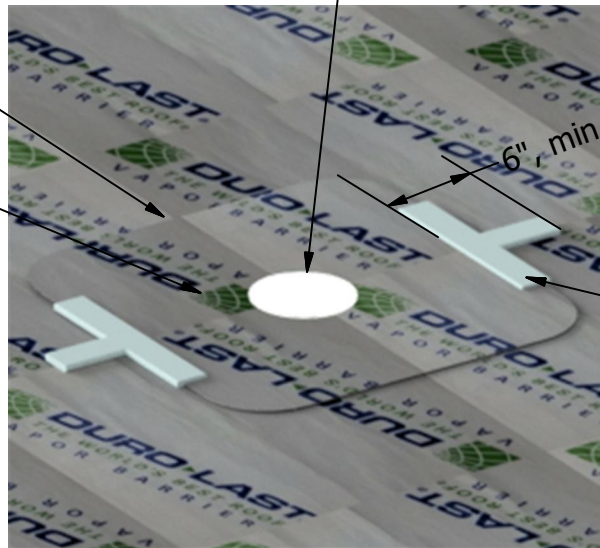


Cut hole 1/2 inch diameter smaller than penetration

6" min.

Mastic (Note 3)

Urethane foam (Note 2)

Mastic (Note 3)

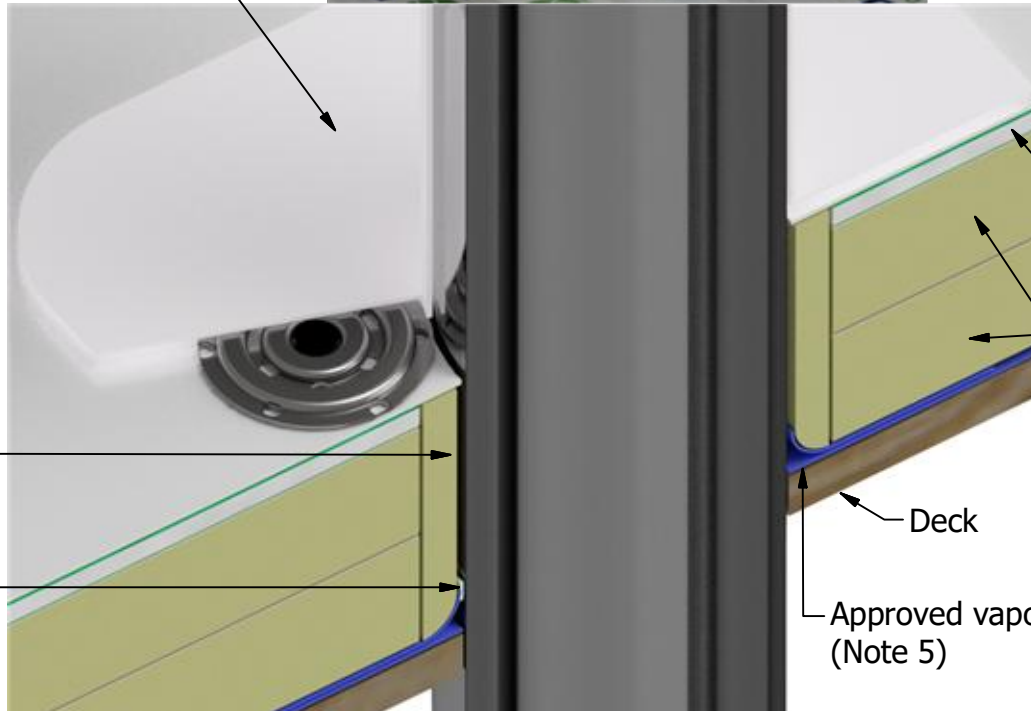

Approved cover board (Note 5)

Approved insulation (Note 5)

Deck

Approved vapor barrier (Note 5)

Note 1: Fill all gaps with spray foam prior to installation of vapor barrier. Shave excess foam level to deck.

Note 2: Prime surfaces as required by Vapor Barrier Product Data Sheet.

Note 3: If vapor barrier will be used as temporary roof, utilize Duro-Guard® mastic to seal edges of T-Laps and overlaps as shown above. Edges must be sealed a minimum of 6 inches out from each T-Lap.

Note 4: If Duro-Guard mastic is used, do not allow contact to the Duro-Last membrane. A proper slip sheet or insulation must be used to separate both products.

REVISED:	12/5/17	ROUND PENETRATION - OPTION 1
PREVIOUS:	08/07/17	DURO-GUARD VAPOR BARRIER
SCALE:	NONE	NEW CONSTRUCTION OR RE-ROOF