
DURO-LAST®
THE WORLD'S BEST ROOF®

DETAIL TAS4010

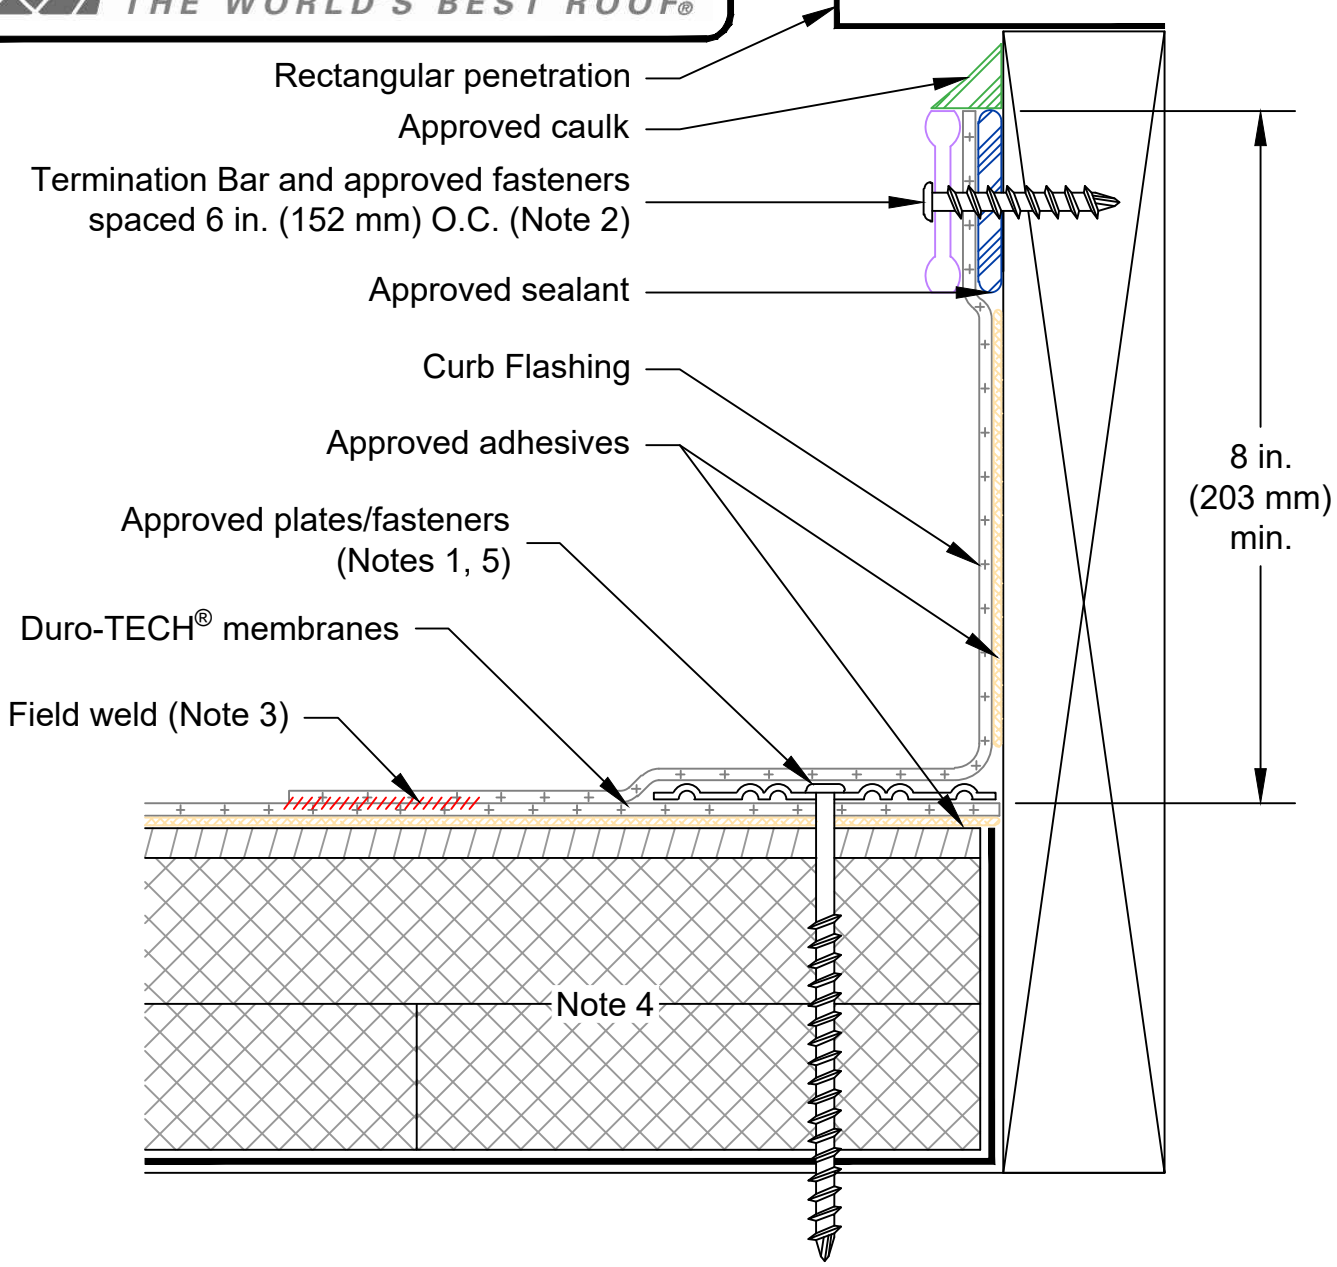

Note 1: Deck membrane must be fastened around perimeter of roof penetration as per respective zone the rectangular penetration is located within (field, perimeter, corner). As an alternative to deck fastening, plates/fasteners may be fastened to the curb.

Note 2: Termination Bar must have an approved fastener within 1 in. (25 mm) of each corner.

Note 3: All field welds must be a minimum of 1-1/2 in. (40 mm) wide.

Note 4: Refer to specifications for vapor barrier, insulation, cover board, and deck requirements.

Note 5: Any approved membrane plate may be used. It is recommended to use 3-Inch Metal Plates or Cleat Plates®.

REVISED:	08/06/2026	TPO ROOF PENETRATION DETAIL FOR ADHERED NON-FLEECE SYSTEMS
CREATED:	05/04/2026	ADHERED RECTANGULAR PENETRATION
SCALE:	NONE	NEW CONSTRUCTION OR RE-ROOF