
DURO-LAST®
THE WORLD'S BEST ROOF®

DETAIL TAS4050

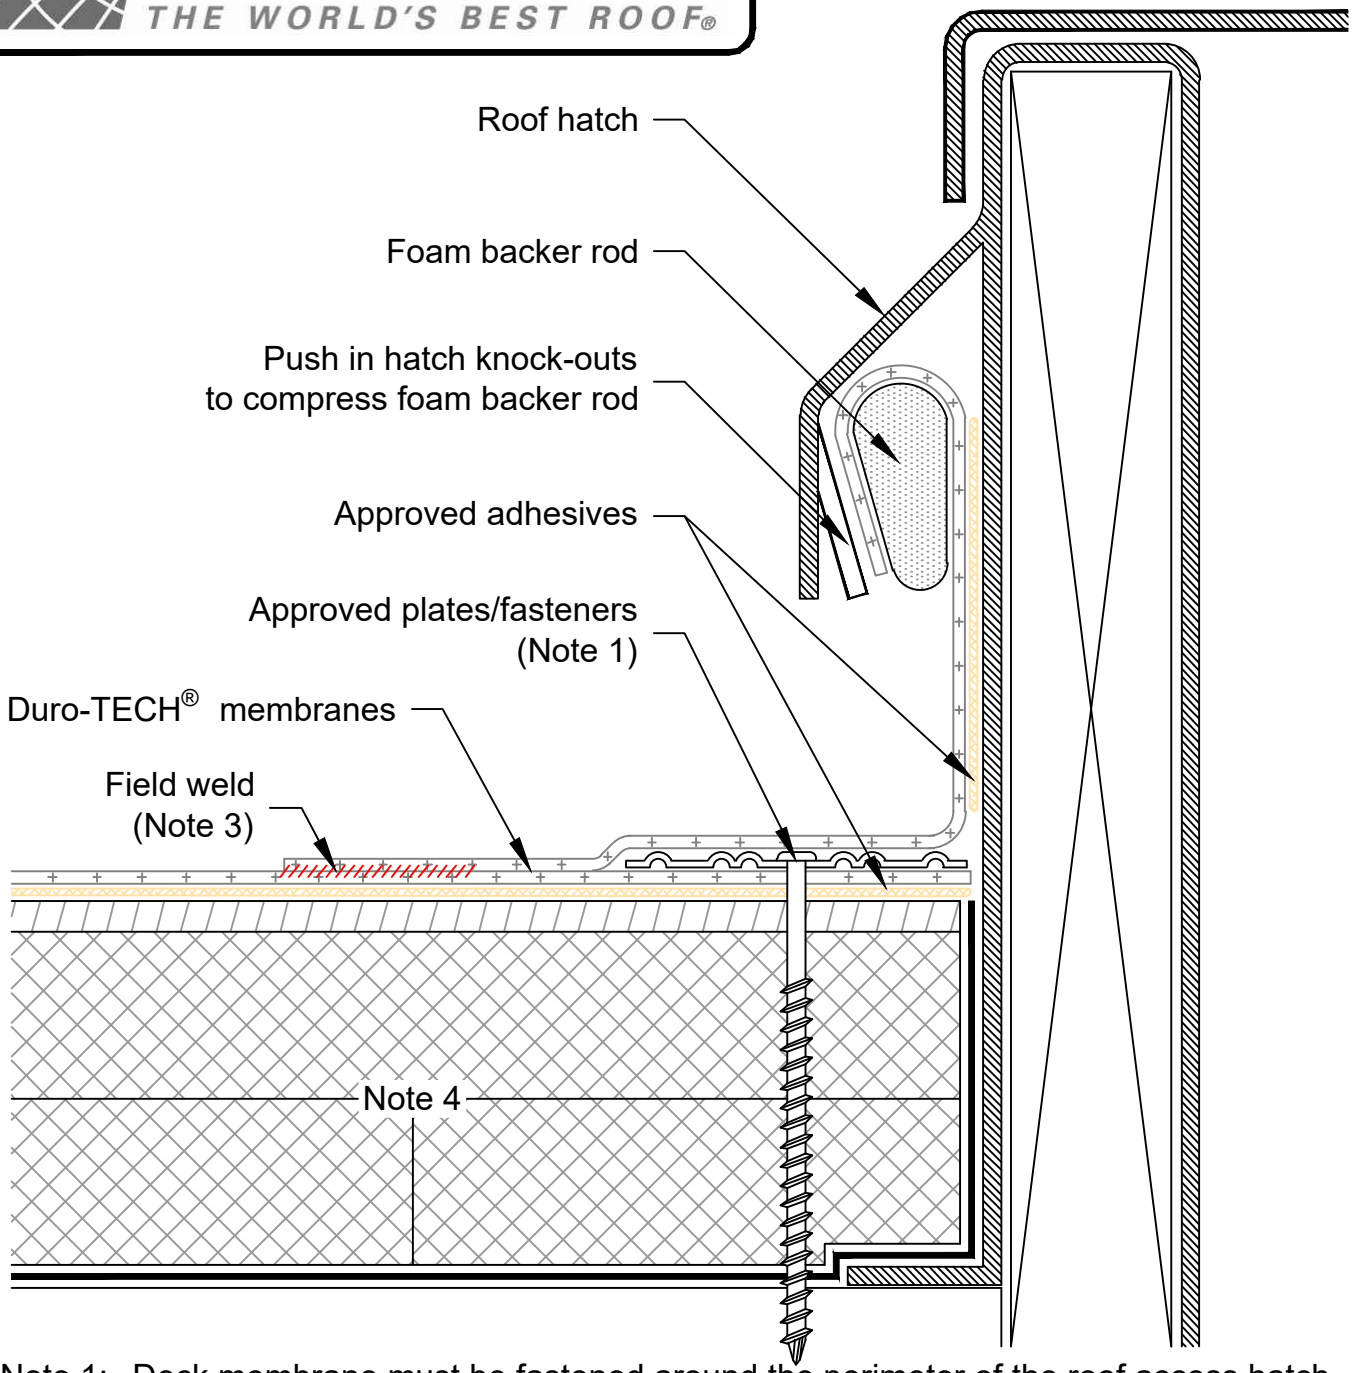

Note 1: Deck membrane must be fastened around the perimeter of the roof access hatch as per the respective zone the roof access hatch is located within (field, perimeter, corner).

Note 2: Flashing membrane must loop over the foam backer rod. Foam backer rod shall be of sufficient size to compress when installed.

Note 3: All field welds must be a minimum of 1-1/2 in. (40 mm) wide.

Note 4: Refer to specifications for vapor barrier, insulation, cover board, and deck requirements.

REVISED:	08/06/2026	TPO ROOF PENETRATION DETAIL FOR ADHERED NON-FLEECE SYSTEMS
CREATED:	05/07/2026	ROOF ACCESS HATCH - OPTION 1
SCALE:	NONE	NEW CONSTRUCTION OR RE-ROOF