
DURO-LAST®
THE WORLD'S BEST ROOF®

DETAIL TAS4070

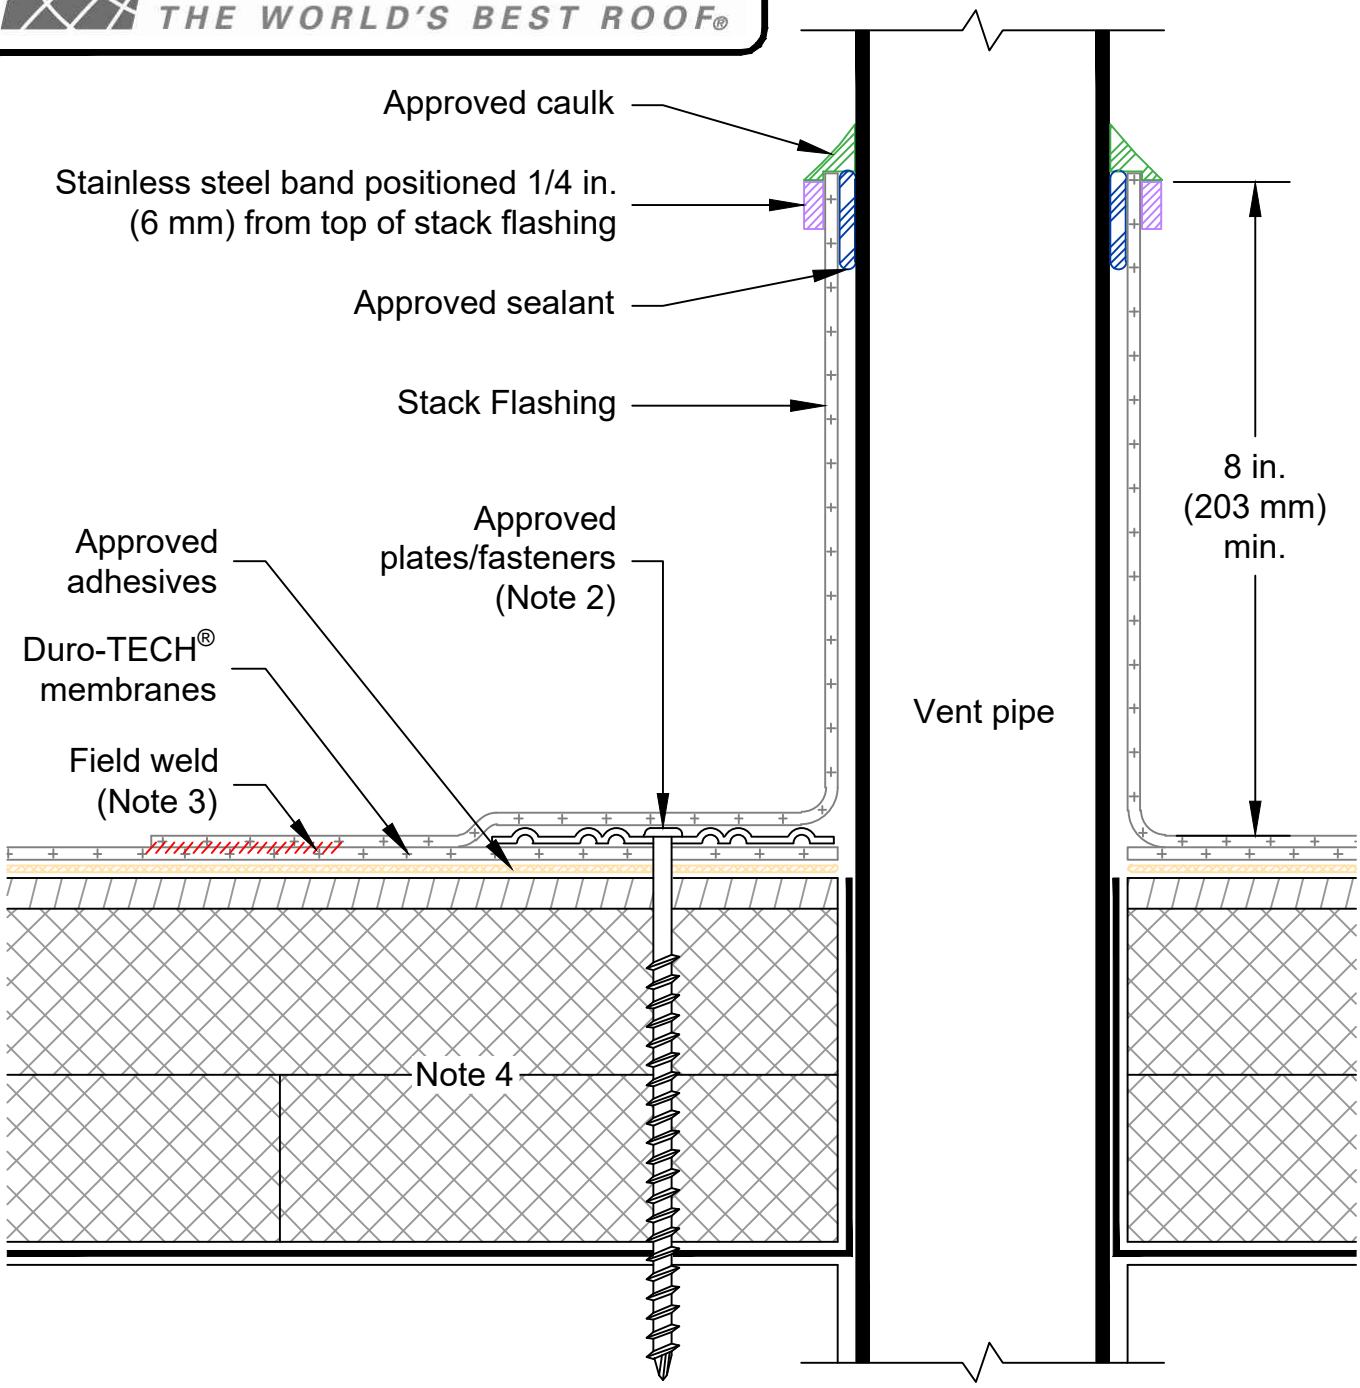

Note 1: Lead flashings must be removed prior to installing Stack Flashings.

Note 2: Deck membrane must be fastened around the perimeter of the Stack Flashing as per the respective zone the Stack Flashing is located within (field, perimeter, corner), no less than one fastener per flashing.

Note 3: All field welds must be a minimum of 1-1/2 in. (40 mm) wide.

Note 4: Refer to specifications for vapor barrier, insulation, cover board, and deck requirements.

REVISED:	08/06/2026	TPO ROOF PENETRATION DETAIL FOR ADHERED NON-FLEECE SYSTEMS
CREATED:	05/07/2026	ROUND PENETRATION
SCALE:	NONE	NEW CONSTRUCTION OR RE-ROOF