
DURO-LAST®
THE WORLD'S BEST ROOF®

DETAIL TAS4090

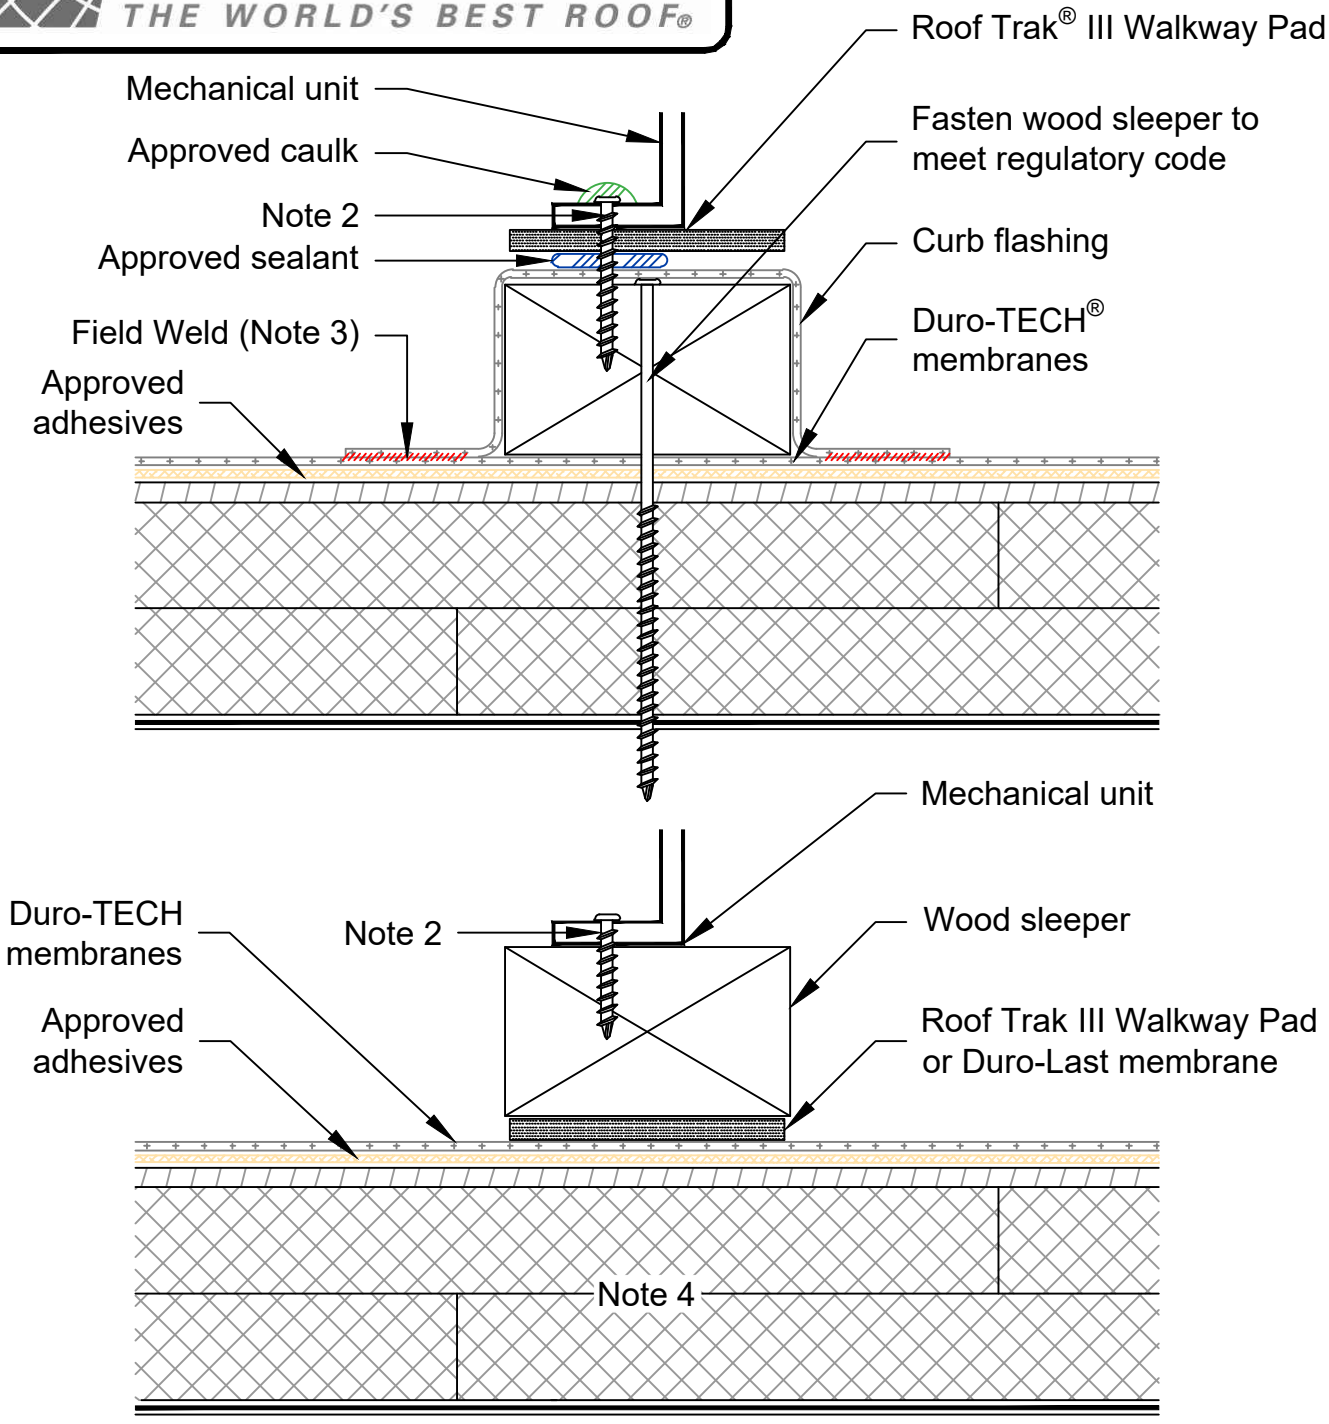

Note 1: If the mechanical units are of a size that they will crush the insulation, then the insulation below the sleeper must be replaced by wood blocking.

Note 2: Attach mechanical unit to sleeper per equipment manufacturer's instructions.

Note 3: All field welds must be a minimum of 1-1/2 in. (40 mm) wide.

Note 4: Refer to specifications for vapor barrier, insulation, cover board, and deck requirements.

REVISED:	08/06/2026	TPO ROOF PENETRATION DETAIL FOR ADHERED NON-FLEECE SYSTEMS
CREATED:	05/07/2026	WOOD SLEEPER
SCALE:	NONE	NEW CONSTRUCTION OR RE-ROOF