


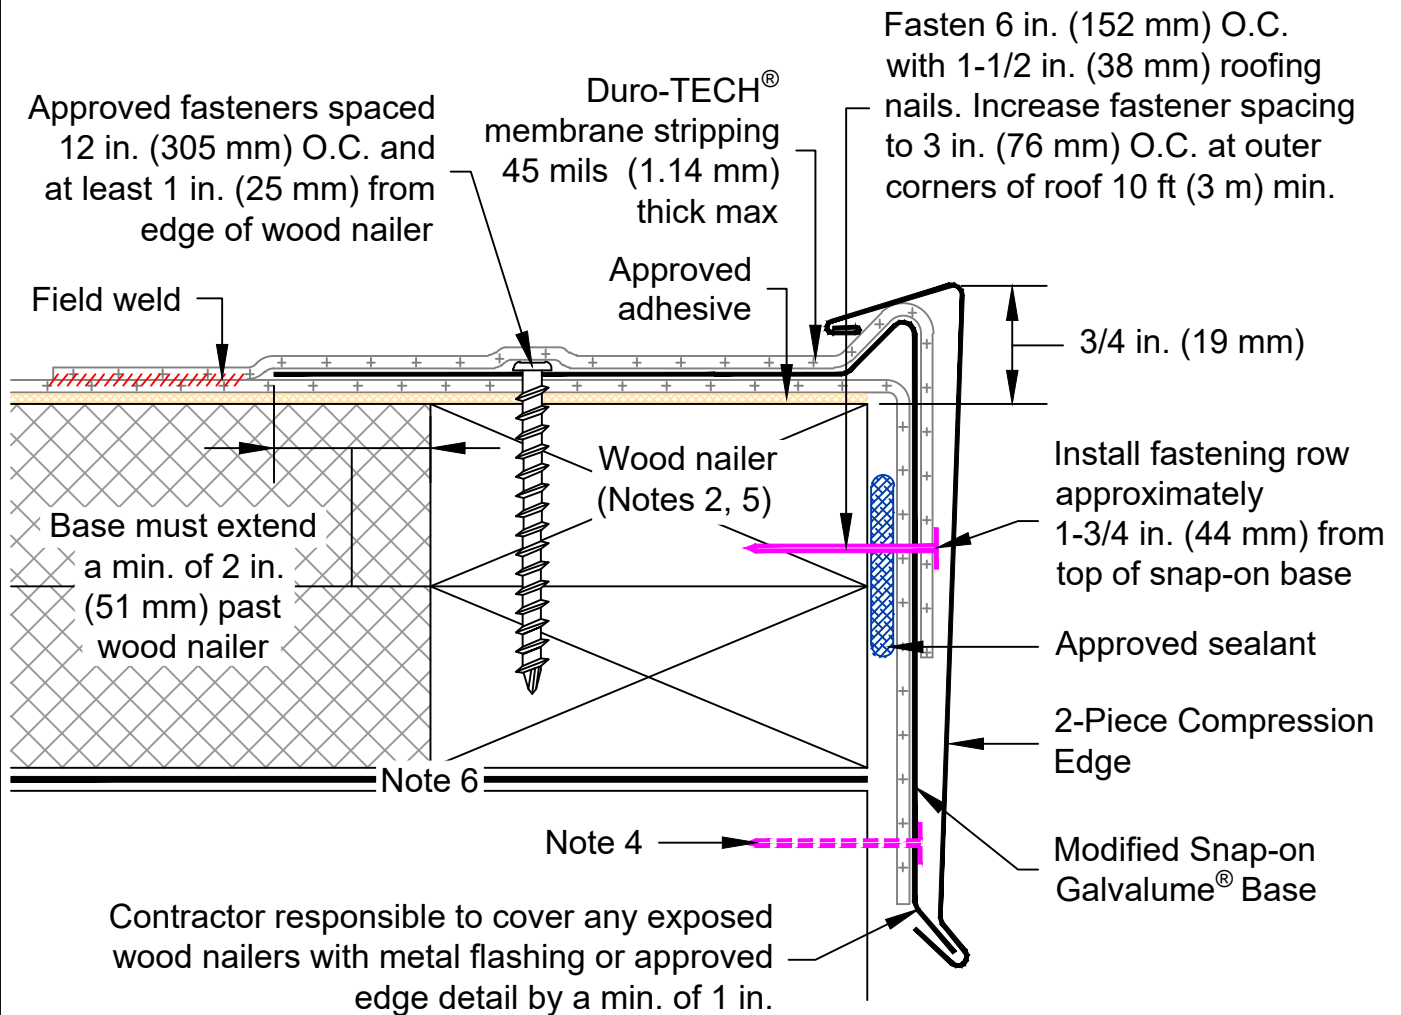

Note 1: Detail TAS9060C may be used in lieu of Details TAS9060A and TAS9060B, but not within special wind regions or on parapets, when a peel stop is required. Refer to Detail TAS9060 for peel stop requirements.

Note 2: A wood nailer is required if 1 in. (25 mm) or more of insulation is used. Top of the wood nailer is to be flush with the top of the insulation.

Note 3: Allow for 1/8 in. (3 mm) expansion gap between 10 ft (3 m) lengths of snap-on base. Overlap the snap-on covers by 2 in. (51 mm) between 10 ft (3 m) lengths.

Note 4: When installing this detail with a 6 in. (152 mm) or greater vertical surface, fasteners must be located within 2 in. (51 mm) of the kick-out.

Note 5: Refer to General Requirements for wood nailer requirements.

Note 6: Refer to specifications for vapor barrier, insulation, cover board, and deck requirements.

REVISED: N/A	TPO INSULATION DETAIL FOR ADHERED NON-FLEECE SYSTEMS
CREATED: 08/05/2026	PEEL STOP CLEAT
SCALE: NONE	NEW CONSTRUCTION OR RE-ROOF