


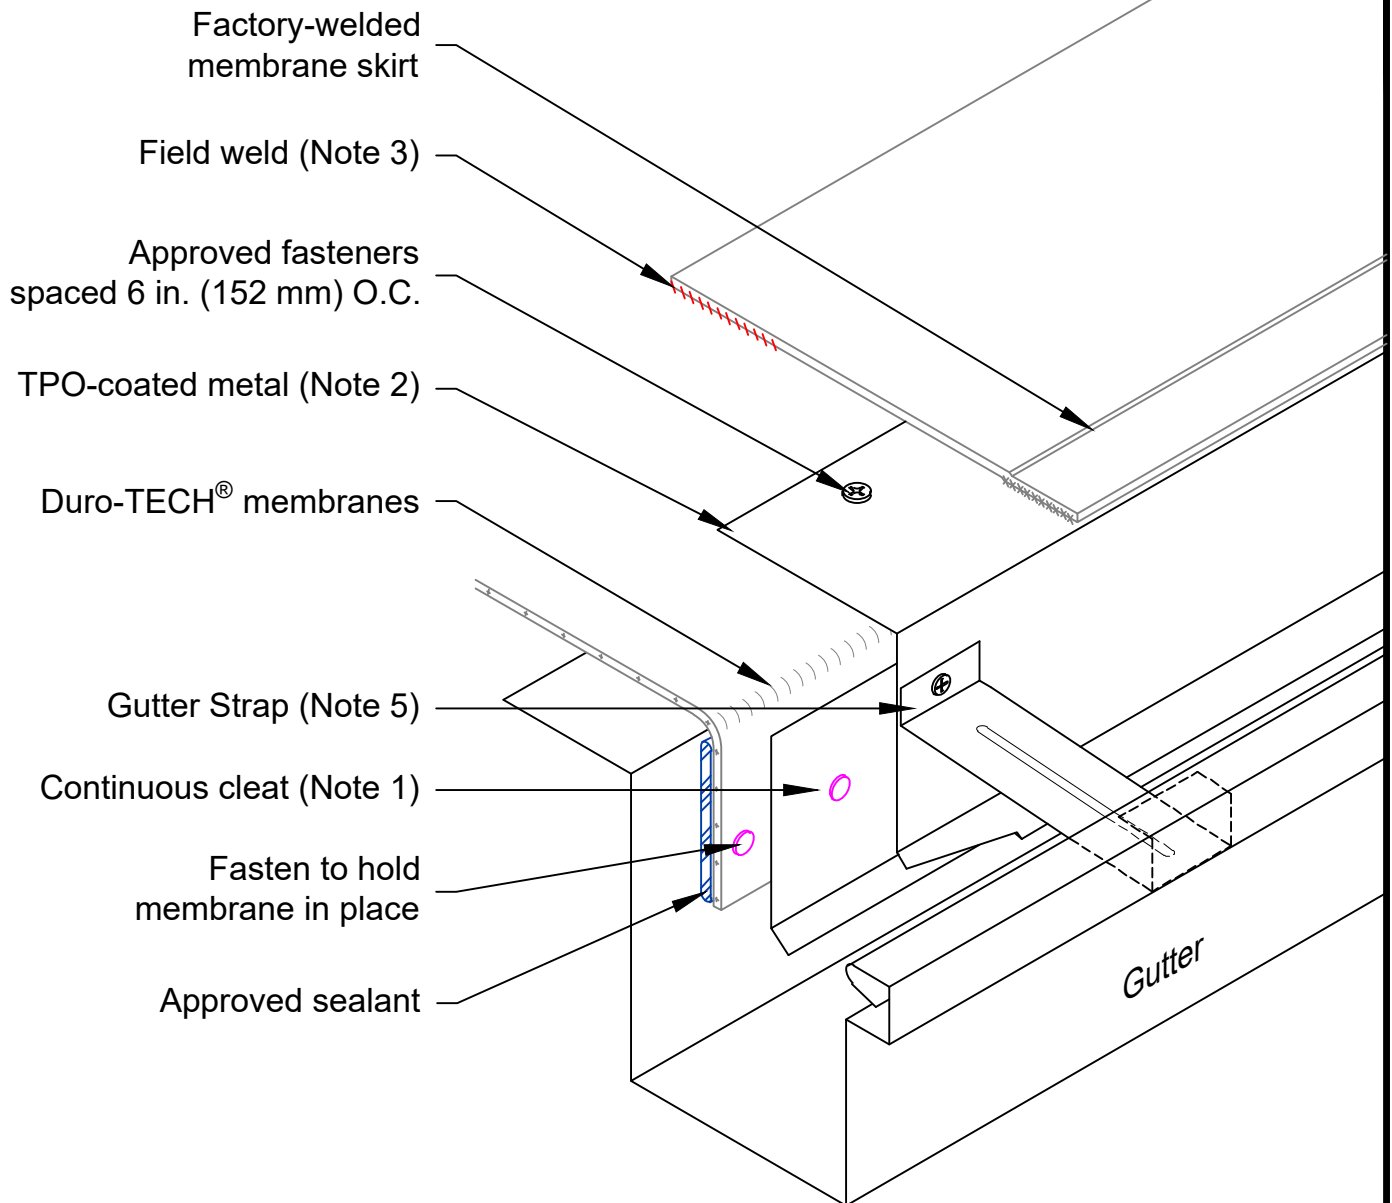

Note 1: TPO-Coated Metal Drip Edge requires a continuous cleat fastened 6 in. (152 mm) on center, into a gutter. Use roofing nails that penetrate substrate by a minimum of 1-1/2 in. (40 mm).

Note 2: Each section must overlap by 1-1/2 in. (40 mm).

Note 3: All field welds must be a minimum of 1-1/2 in. (40 mm) wide.

Note 4: Refer to General Requirements for wood nailer requirements.

Note 5: Gutter installation and gutter strap spacing per gutter manufacturer's instructions.

REVISED: N/A	TPO EDGE DETAIL FOR MECHANICALLY FASTENED SYSTEMS
PREVIOUS: 08/17/2026	TPO-COATED METAL DRIP EDGE INTO GUTTER
SCALE: NONE	NEW CONSTRUCTION OR RE-ROOF