




TIE-IN TO NON-DURO-TECH MEMBRANE

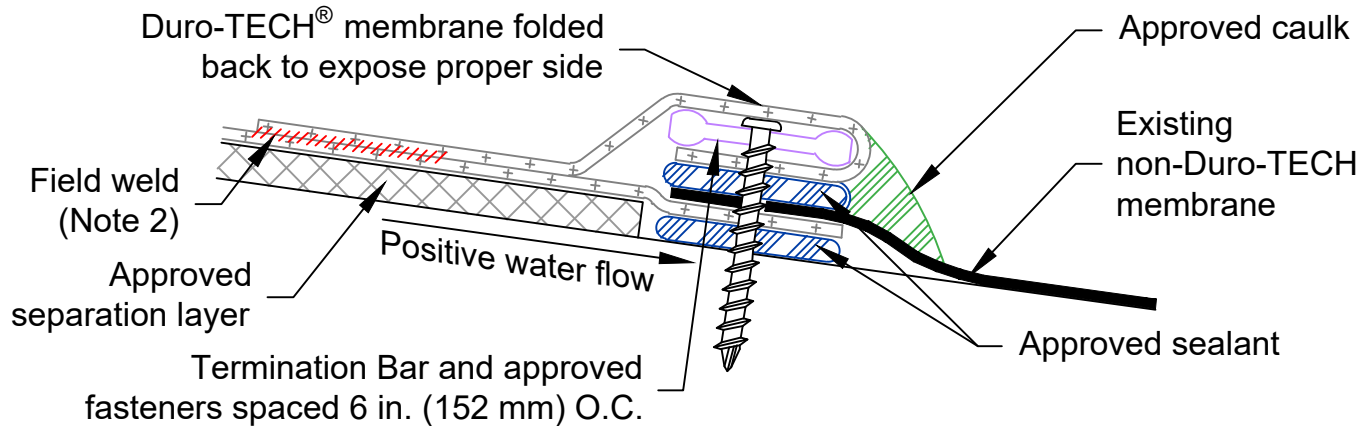

TIE-IN TO DURO-TECH MEMBRANE GREATER THAN ONE YEAR OLD

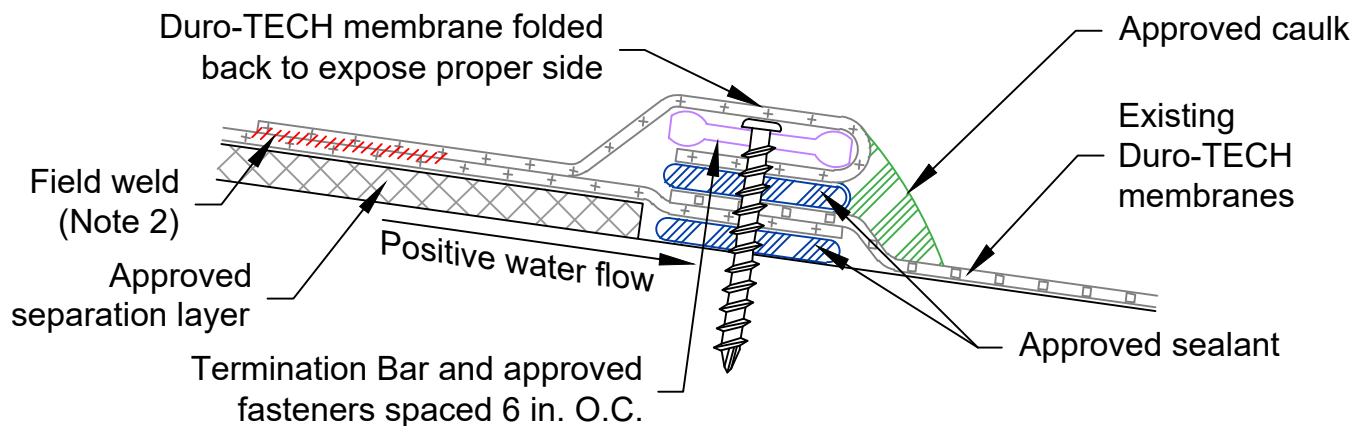

TIE-IN TO DURO-TECH MEMBRANE LESS THAN ONE YEAR OLD

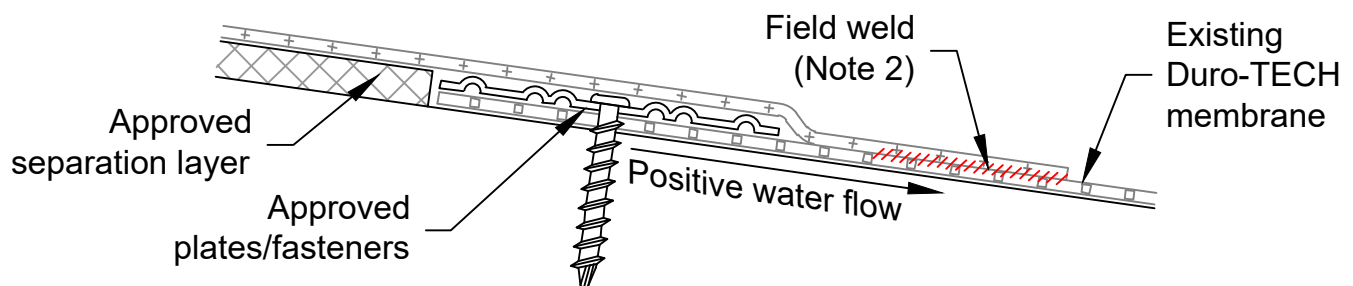

Note 1: Tie-in detail for all flat surfaces. The use of Detail T1070 will be required in conjunction with Detail T1100 when tie-in is across metal flutes.

Note 2: All field welds must be a minimum of 1-1/2 (40 mm) in. wide.

REVISED: N/A	TPO GENERAL DETAIL FOR MECHANICALLY FASTENED SYSTEMS
CREATED: 10/05/2026	SINGLE-PLY ROOF TIE-IN
SCALE: NONE	NEW CONSTRUCTION OR RE-ROOF FOR TPO MAMBRANES