
DETAIL TRG1064

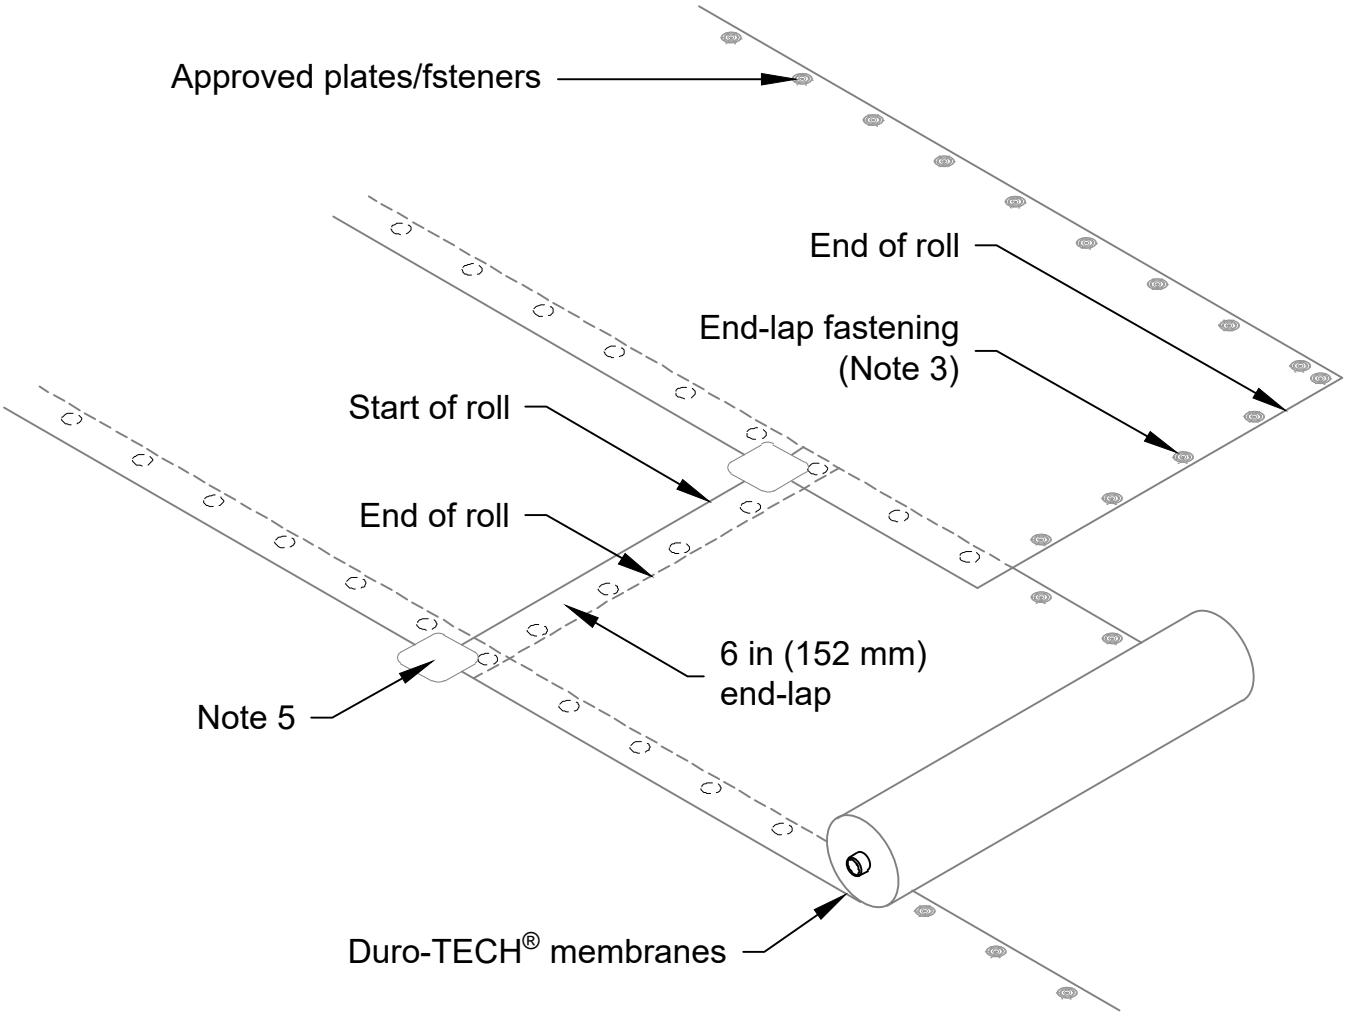

Note 1: This detail applies to TPO roll good membrane installations.

Note 2: The fastening plates must be installed 1/2 - 1 in. (13 - 25 mm) away from the membrane edge.

Note 3: End of roll fastening should be same as lap fastening as per respective zone (field, perimeter, corner).

Note 4: Position next roll so that it overlaps end of installed roll a minimum of 6 in.(152 mm). Duro-TECH membranes are all premarked with lap lines set 6 in. (152 mm) from edge of membrane.

Note 5: Install covers at T-Joints per Detail TRG1066.

REVISED: N/A	TPO GENERAL DETAIL FOR MECHANICALLY FASTENED SYSTEMS
CREATED: 10/23/2026	END-LAP FASTENING AND OVERLAP
SCALE: NONE	NEW CONSTRUCTION OR RE-ROOF