

DURO-TECH TPO INSIDE AND OUTSIDE CORNERS


DESCRIPTION:

Duro-TECH TPO Inside and Outside Corners (“Corners”) are used in corner areas encountered on Duro-TECH™ thermoplastic polyolefin (“TPO”) membrane installations.

Corners are fabricated from reinforced TPO membrane.

ORDERING:

Corners are 6 x 6 inches (152 x 152 mm) and available in white, tan, and gray.

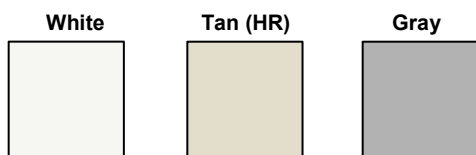

Custom sizes and colors available upon request.

AVAILABLE SIZES		
Type/Size/Color	Item #	Pkg Weight lb (kg)
INSIDE: 6-in. (152-mm) White	1311TW	< 7 (3.18)
OUTSIDE: 6-in. (152-mm) White	1312TW	< 7 (3.18)

STORAGE AND HANDLING:


- Keep away from ignition sources.
- Always store in a dry location protected from the elements.

PRECAUTIONS:

- Keep away from ignition sources. **Do not smoke while installing.**
- Wear proper personal protective equipment, such as gloves and eye protection, per the SDS.



OUTSIDE CORNER | INSIDE CORNER

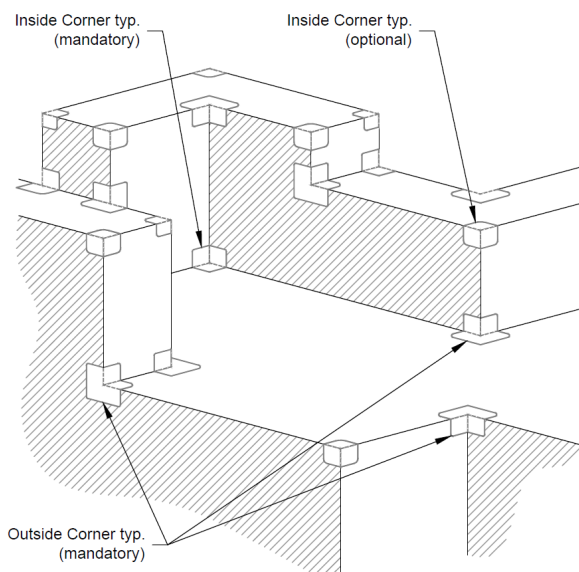

LOCATIONS TO USE CORNERS

INSTALLATION:

Installation must be completed in compliance with the appropriate Duro-TECH TPO details and specifications.

1. Prepare all affected surfaces to be welded with an approved TPO membrane cleaner, if necessary.
2. Heat (hot-air) weld the Corner to the TPO deck or parapet membrane with a minimum 1-1/2-inch (40-mm) weld.

Note: The use of Outside Corners is required.

Note: The use of Inside Corners is required at all inside wall transitions.