
DURO-LAST®
THE WORLD'S BEST ROOF®

DETAIL TAS2021

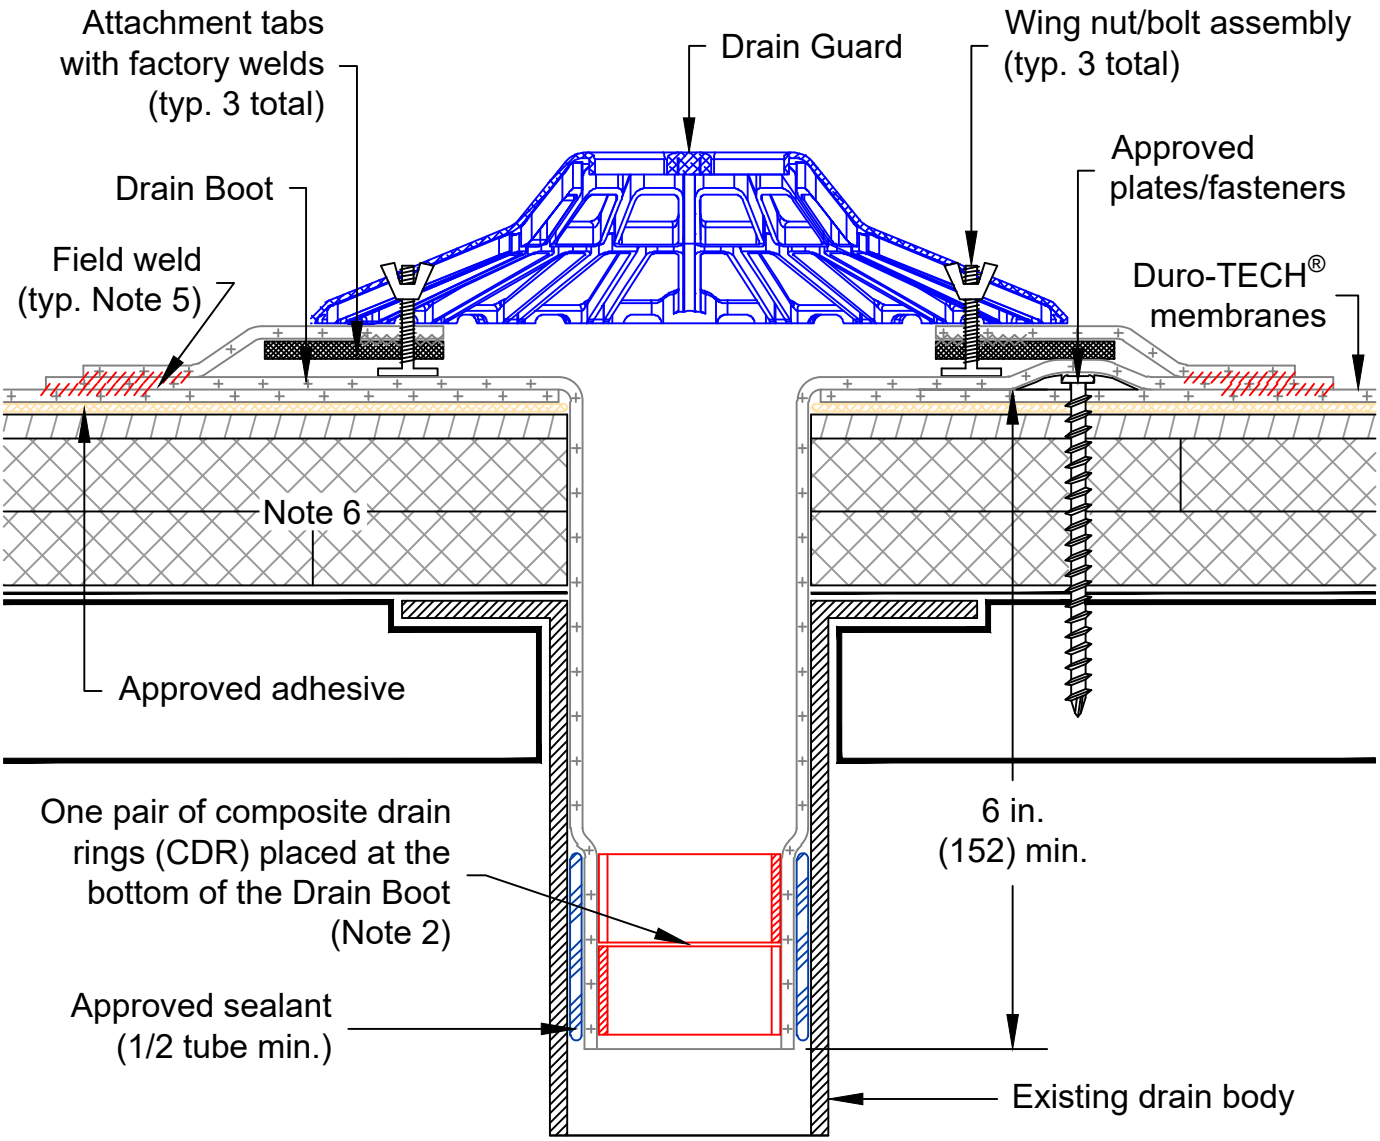

Note 1: Membrane must be fastened around the perimeter of the drain with the same fastening pattern as the field membrane, no less than 1 fastener per drain.

Note 2: Openings in the CDRs must face in opposite directions. Sealant must be behind the membrane at the CDRs' location.

Note 3: Drain guard attachment tabs are secured to the roof membrane by heat welding. Do not mechanically fasten.

Note 4: Drain boots are made to fit specific drain sizes. Never install a drain boot into a drain of a different size.

Note 5: All field welds must be a minimum of 1-1/2 in. (40 mm) wide.

Note 6: Refer to specifications for vapor barrier, insulation, cover board, and deck requirements.

REVISED:	08/10/2026	TPO DRAINAGE DETAIL FOR ADHERED NON-FLEECE SYSTEMS
CREATED:	09/26/2025	ROOF DRAIN WITH DRAIN GUARD
SCALE:	NONE	NEW CONSTRUCTION OR RE-ROOF