
DURO-LAST®
THE WORLD'S BEST ROOF®

DETAIL TAS3540

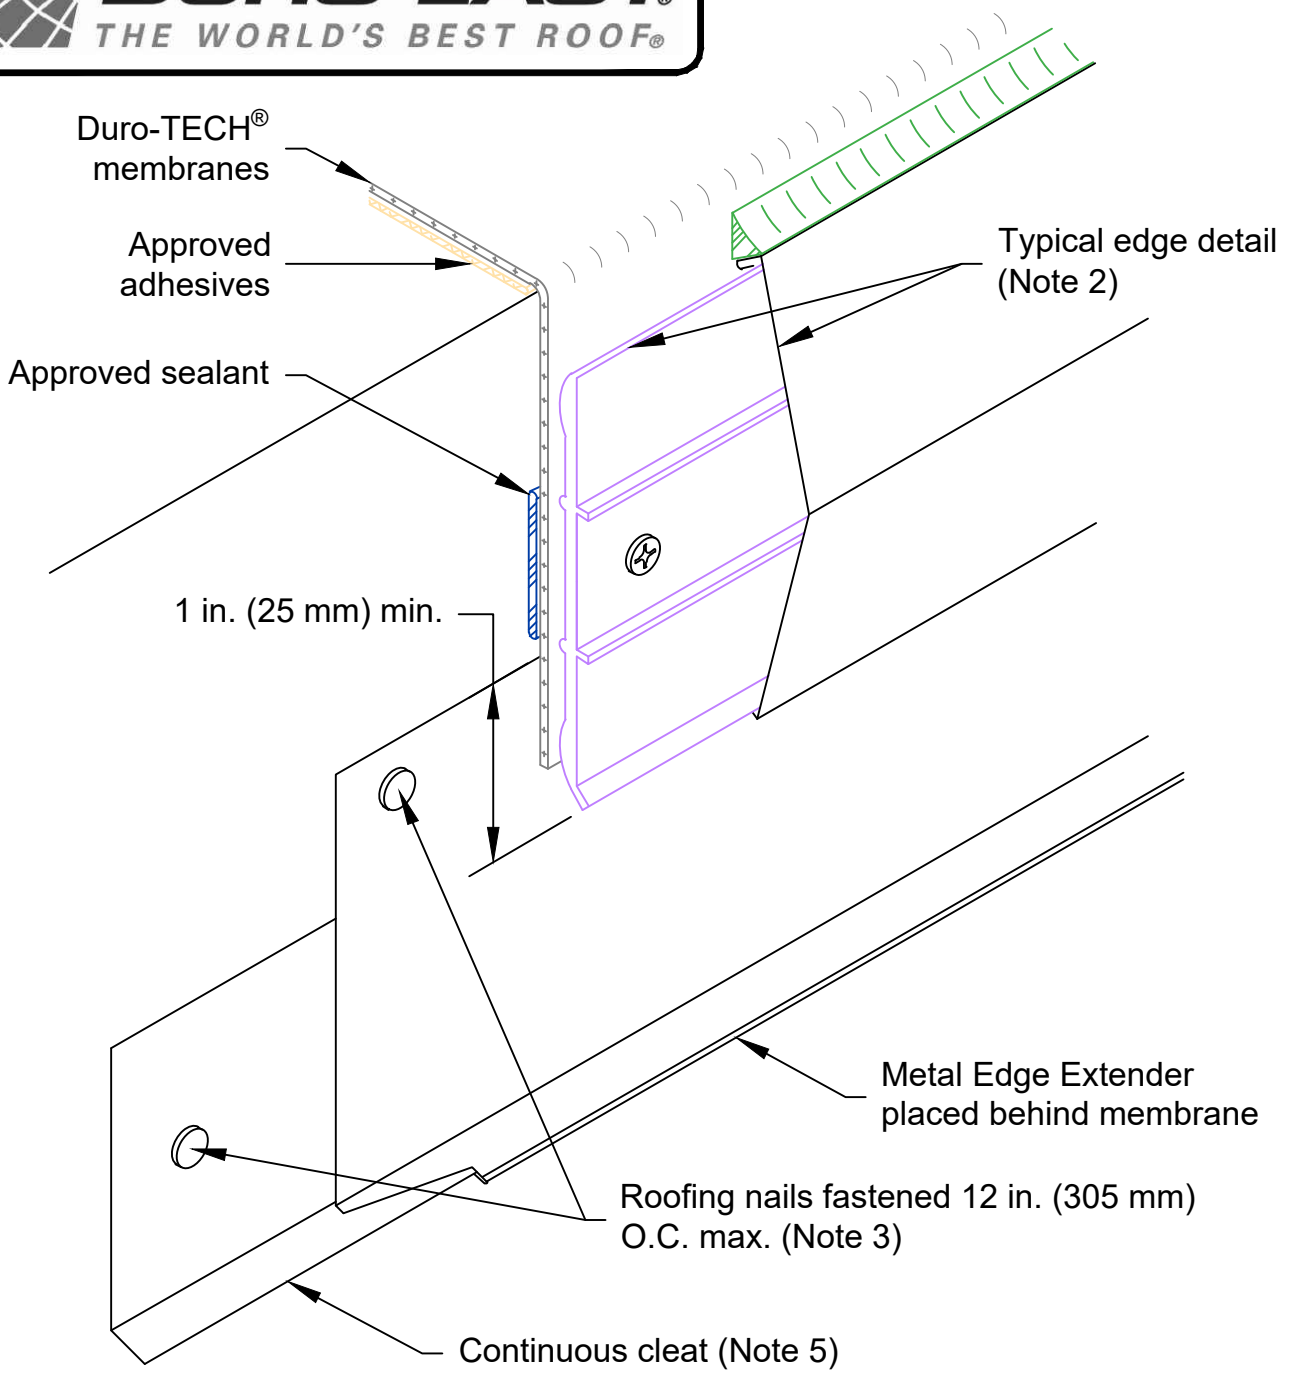

Note 1: This detail may also be used on parapets.

Note 2: Refer to appropriate Detail for installation instructions of edge detail.

Note 3: All fasteners must penetrate substrate by a minimum of 1-1/2 in. (38 mm).

Note 4: Install adjacent sections of Metal Edge Extender over expansion tabs and allow for 1/8 in. (3 mm) gap between overlapping sections. Refer to Detail TAS3510.

Note 5: If Metal Edge Extender is 4 in. (102 mm) or larger, a continuous cleat is required.

REVISED:	08/07/2026	TPO METAL EDGE DETAIL FOR ADHERED NON-FLEECE SYSTEMS
CREATED:	09/26/2025	METAL EDGE EXTENDER
SCALE:	NONE	NEW CONSTRUCTION OR RE-ROOF