
DURO-LAST® THE WORLD'S BEST ROOF®

DETAIL TAS1070

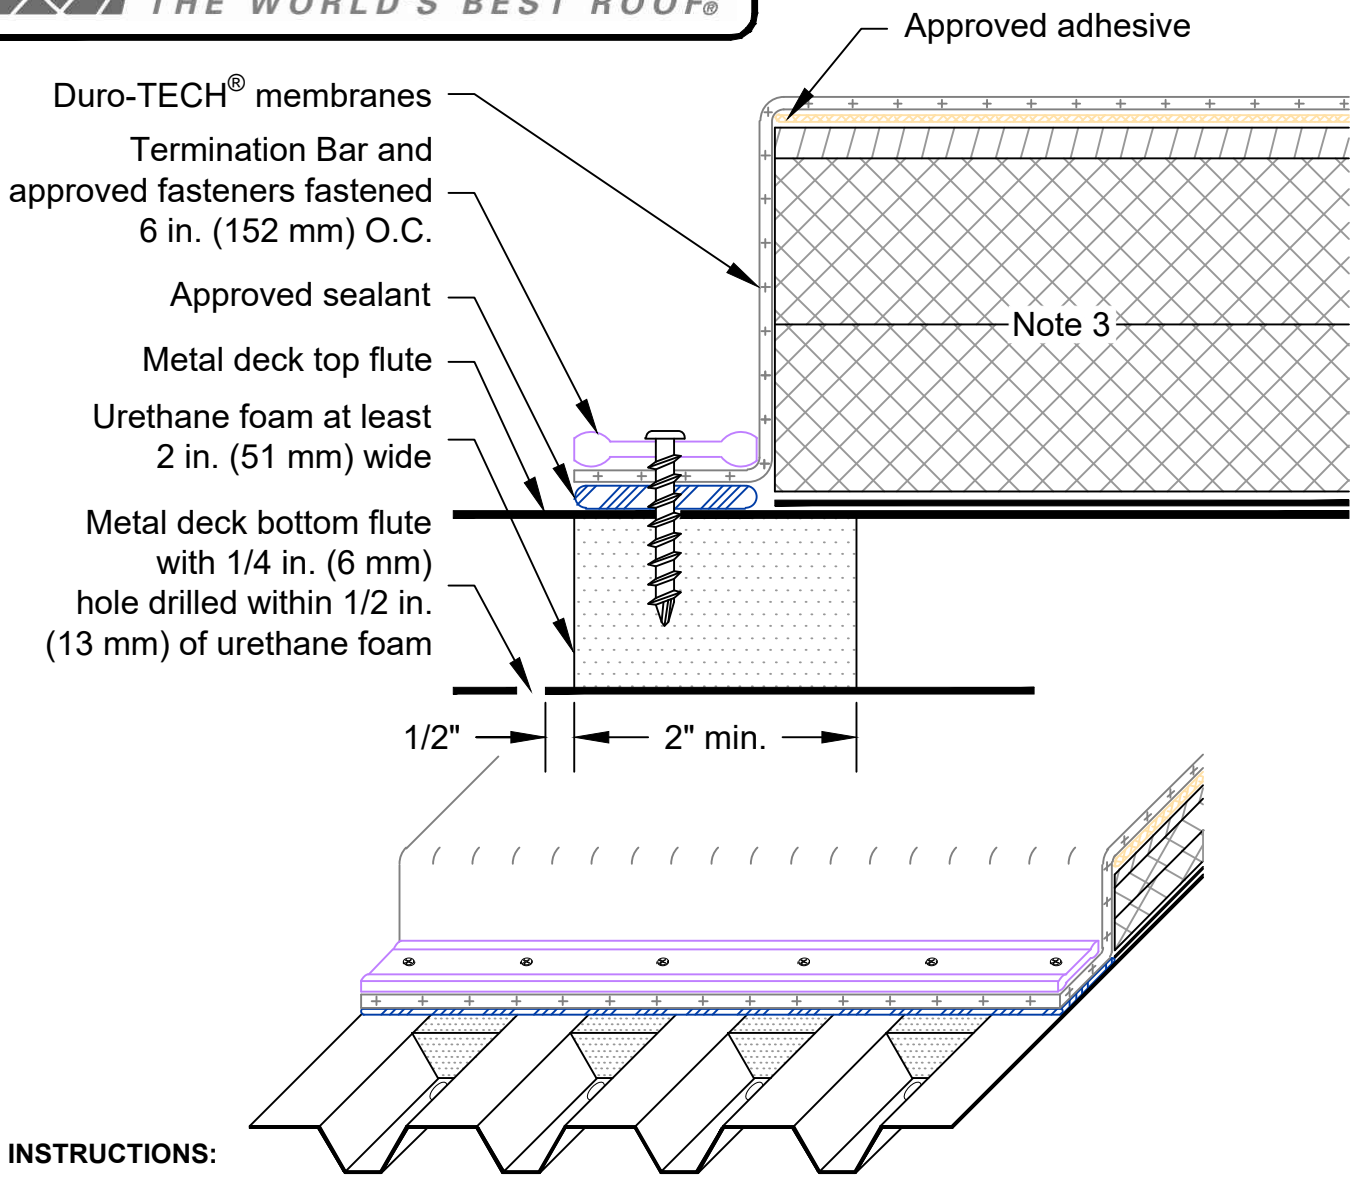

INSTRUCTIONS:

1. Drill 1/4 in. (6 mm) diameter holes in the bottom of the flutes on the existing-roof side of the tie-in only when they will be covered with new roofing material.
2. Apply approved sealant to underside of material and fasten with Termination Bar before the urethane foam is installed.
3. Fill between the flutes with urethane foam level with the top flutes.

Note 1: This detail is not approved for final termination. See Details TAS1080, TAS1100, or TAS8040 for the appropriate completion of this detail.

Note 2: This detail is not approved on metal retrofit applications.

Note 3: Refer to specifications for vapor barrier, insulation, cover board, and deck requirements.

REVISED:	08/11/2026	TPO GENERAL DETAIL FOR ADHERED NON-FLEECE SYSTEMS
CREATED:	09/26/2025	CROSS-FLUTE METAL DECK TERMINATION
SCALE:	NONE	NEW CONSTRUCTION OR RE-ROOF